MOTOPLASTIC, S.A.
Molí de la sal, 1 - 08403 Granollers (Barcelona) SPAIN
Tel. 34 93 849 06 33 - Fax 34 93 849 09 88
info@puig.tv - info@puigusa.com
www.puig.tv - www.puigusa.com

CARENABRÍS TRAFFIC ADAPTABLE A -
WINDSHIELD TRAFFIC ADAPTABLE A - WINDSCHUTZSCHEIBE TRAFFIC FÜR

UNIVERSAL

Mod.: TRAFIC
Ref.: 4873

Mod.: URBAN
Ref.: 7599




PREVENCIÓN
- Usar agua y jabón neutro para limpiar la pantalla.
- Revisar periódicamente el apriete de la tornillería.
- Estacionar el scooter en dirección al sol, evitando el efecto lupa que puede dañar algunas partes.
- Aparcar si es posible en superficies niveladas.

Gracias por su atención.

PREVENTION
- Use water and neutral soap to clean the windshield.
- Check the tightening of the fasteners peridiocally.
- Park the scooter facing the sun, avoiding the sun-reflection effect that may damage some parts.
- Park if possible on even surfaces.

Thanks for your attention.

ID.	DESCRIPCIÓN	DESCRIPTION	QTY.
1	Pantalla	Windshield	1
2	Tapa exterior	Exterior cap	2
3	Soporte rótula exterior	Ball bearing exterior support	2
4	Soporte rótula interior	Ball bearing interior support	2
5	Tornillo allen M5x20 DIN912	M5x20 DIN912 allen screw	4
6	Tuerca M5 DIN982 autofrenado	M5 DIN982 lock nut	4
7	Tornillo phillips M5x13	M5x13 phillips screw	4
8	Varilla recta Ø9x200	Straight rod Ø9x200	2
9	Tapón final varilla	Final bar cap	2
10	Tornillo M6x35 DIN912	M6x35 DIN912 screw	2
11	Soporte guía sujección varilla	Rod guide support	2
12	Acoplamiento esquadra	Coupling angle	2
13	Esquadra Ø8 Ref.:581	Ø8 angle Ref.:581	2
14	Tornillo M8x30	M8x30 screw	2
15	Tuerca M8 DIN6923	M8 DIN6923 nut	2
16	Soporte retrovisor Ø8xØ8	Mirror support Ø8xØ8	2
17	Caperuza plana M8	M8 nut cover	4
18	Tapón tornillo M6 DIN912	M6 DIN912 screw cap	2
19	Fuelle tapataladros	Below drill cover	2
20	Casquillo Ø14xØ8x12	Ø14xØ8x12 spacer	2
21	Tuerca M6 DIN6923	M6 DIN6923 nut	2
22	Caperuza plana M6	M6 nut cover	2
23	Adaptador hex. rosca ext.izq.M8 a rosca int.M8	Adapter hex. thread ext.left M8 to thread int.M8	2
24	Adaptador hex. rosca ext.M10 a rosca int.M8	Adapter hex. thread ext.M10 to thread int.M8	2
25	Adaptador hex. rosca ext.izq.M10 a rosca int.M8	Adapter hex. thread ext.left M10 to thread int.M8	2
26	Adaptador hex. rosca int.izq.M8 a rosca ext.M8	Adapter hex. thread int.left M8 to thread ext.M8	2
27	Adaptador hex. rosca int.M10 a rosca ext.M8	Adapter hex. thread int.M10 to thread ext.M8	2
28	Adaptador hex. rosca int.izq.M10 a rosca ext.M8	Adapter hex. thread int.left M10 to thread ext.M8	2

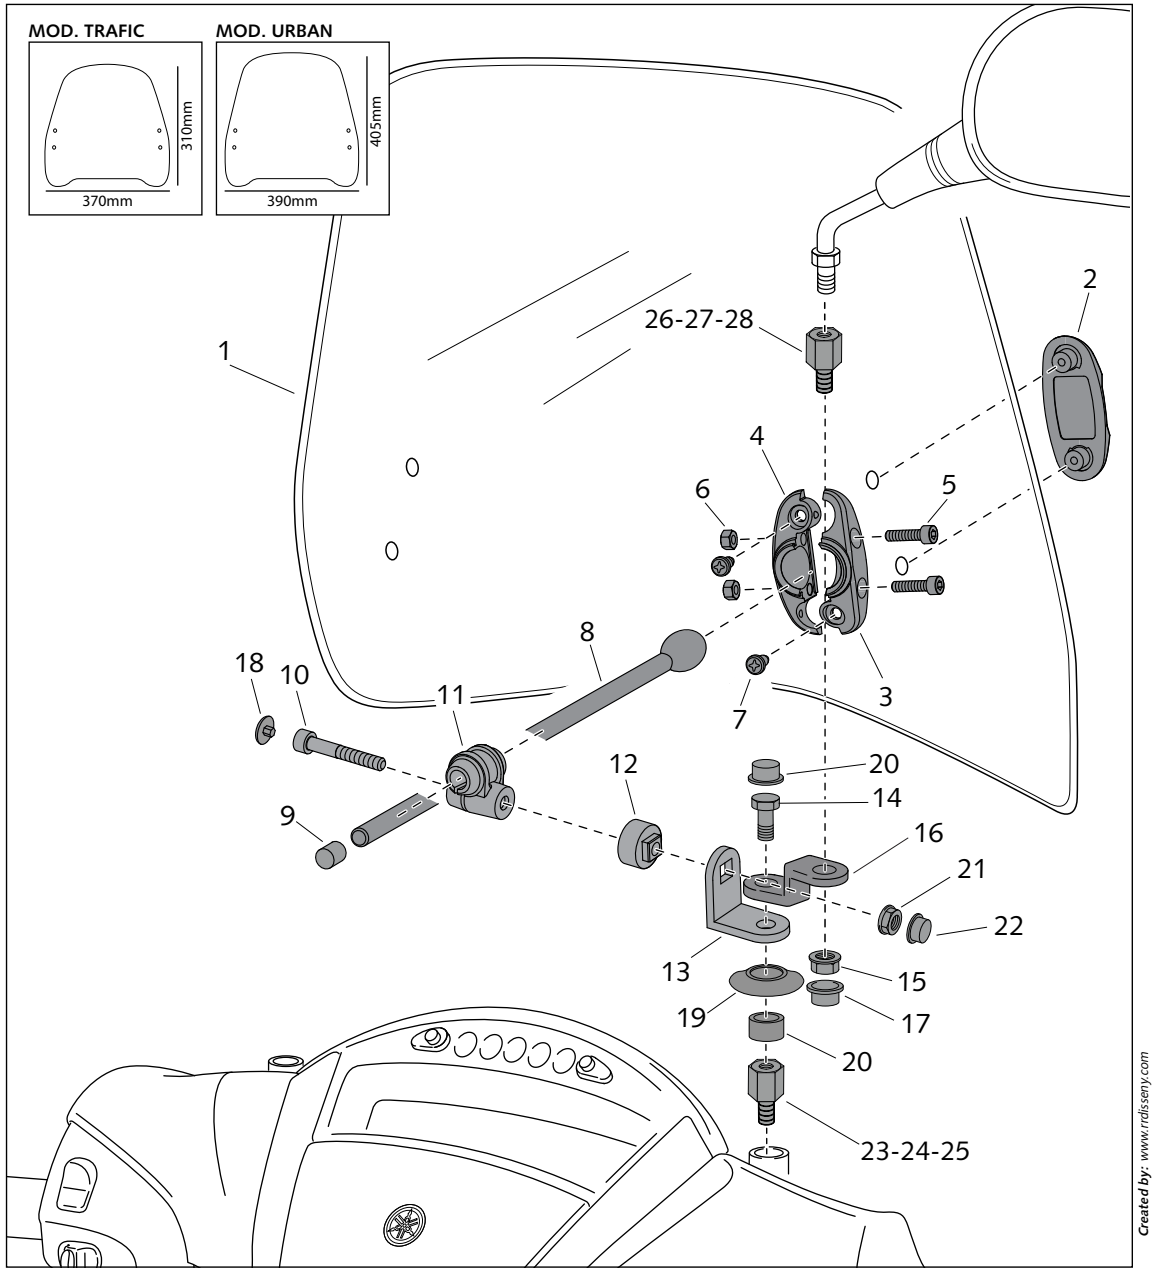

Created by: www.rdisseny.com