





- 1 PM01-06-051 Plate N°32
- 2 NE01-06-026 TH 6x25mm
- 2 NE01-03-006 M6 Large washers
- 4 NE01-03-001 M6 Washers
- 2 NE01-04-002 Clamped bolts
- 4 NE01-04-003 Em6f
- 6 NE01-02-005 Tfhc 6x35mm
- 2 NE01-02-003 Tfhc 6x25mm
- 2 PM01-04-199 Plastic mounts

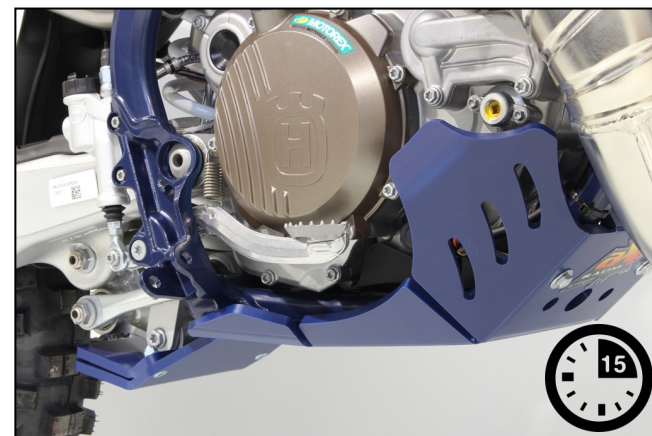

AX1571
XTREM SKID PLATE
BLUE
HUSQVARNA TE250i-300i



1 Put the clamped bolts into the plastic mounts

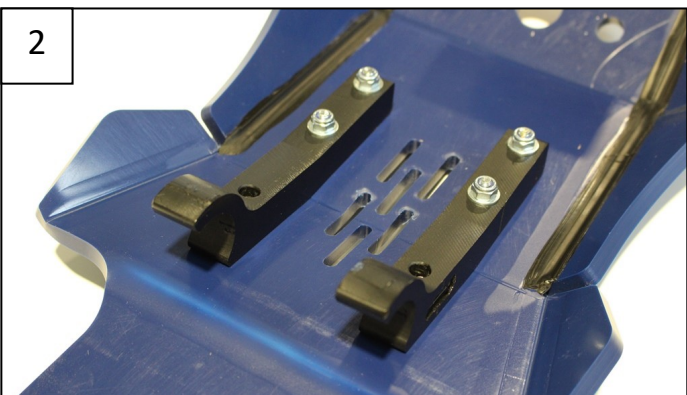

2 Fix 4 Tfhc 6x30mm + M6 washers + Em6f



3 Clip the rear of the skid plate on the rear tube



4 Fix the 2 last Tfhc 6x30mm



5 Fix Th6x26mm + M6 Large washers into the frame



6 Fix the plastic plate with the Tfhc 6x25mm + M6 Washers + em6f